

Eastwoods Model: ECE 275-21P Petrol 4000psi Water Pressure Cleaner

Supplied by Centenary Hire. Ph: (07) 3715 9700

INSTRUCTIONS FOR USE: Please read carefully before putting machine into operation!

GENERAL SAFETY PRECAUTIONS



Personal protective equipment (PPE) must be worn at all times

Use hearing protection when within 4m of running machine.

Wear appropriate safety footwear with a strong upper material which will protect against accidental passage of high pressure water over the operator's foot. Wear footwear with a non-skid sole to prevent slippage on wet surfaces.

Place warning signage in position appropriate to the need, including barricading the work area from public as required.



DO NOT spray or aim the lance directly at or in the direction of a person, animal or electrical equipment as SERIOUS INJURY or DEATH may result. SEEK MEDICAL ADVICE IF SKIN IS BROKEN.



FIRE and EXPLOSION risk due to petrol fuel vapours or when refuelling.

Motor **MUST** be stopped and ignition switch turned off before refuelling machine. Allow motor to cool before refuelling.

Keep away from ignition sources and combustible materials. Do not smoke or operate near sources of heat or fire. Only use petrol containers fit for the purpose.

When refuelling the machine, avoid breathing petrol fumes. Work upwind where possible.

OPERATING INSTRUCTIONS

PERFORM DAILY CHECKS FIRST:

Check oil levels in pump and motor prior to starting machine.

Check high pressure hose/s for damage ie: splits, cracks.

Run water through water supply hose before connecting to machine to clear out any debris.

Fill fuel tank with unleaded petrol observing safety precautions above.

TO START MACHINE:

1. Connect high pressure hose to machine.
2. Connect lance to high pressure hose.
3. Connect water supply hose (must be 19mm diameter or larger) to machine and turn water supply on.
4. For cold motor starts only, pull choke lever out.
5. Set the motor throttle to approx 1/3 of maximum.
6. Depress the lance trigger to establish a low pressure water flow (through the pump, high pressure hose and lance.)
7. Turn the ignition key all the way to the right to start motor and release key when motor starts.
8. When motor starts, release lance trigger and push choke lever in.
9. Adjust the motor throttle to achieve the required high pressure output.



NEVER START OR RUN THE MACHINE WITHOUT A WATER SUPPLY



ALWAYS TEST AT LOW PRESSURE FIRST TO PREVENT SURFACE DAMAGE.



NEVER STOP ENGINE SUDDENLY WHILE RUNNING AT HIGH SPEED.



ALWAYS TURN MACHINE OFF TO CHANGE LANCE OR OTHER ATTACHMENTS.

TO STOP MACHINE:

1. Reduce motor speed to an idle using the throttle lever.
2. Turn motor ignition switch off.
3. Wait for motor to stop running and turn off water supply.
4. Depress lance trigger to relieve back pressure.
5. Disconnect water supply hose, high pressure hose and lance.

DURING USE



DO NOT lock / secure the lance trigger in the 'ON' position.



DO NOT spray or aim the lance directly at or in the direction of a person, animal or electrical equipment as SERIOUS INJURY or DEATH may result.



ALWAYS point the lance at the surface that is intended to be cleaned.



DO NOT leave machine running while unattended.