





**WARNING**

Never exceed the rated capacity at any station. Doing so may cause the lift to become unstable.

## LOAD CAPACITY CHART

2100 Series Lift

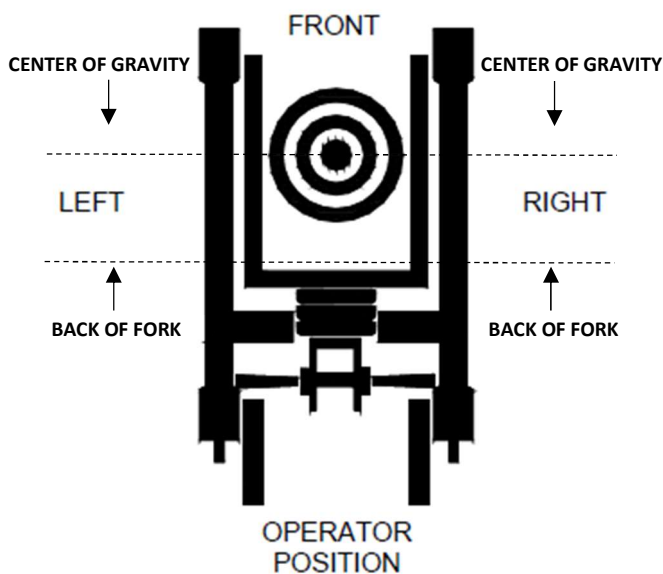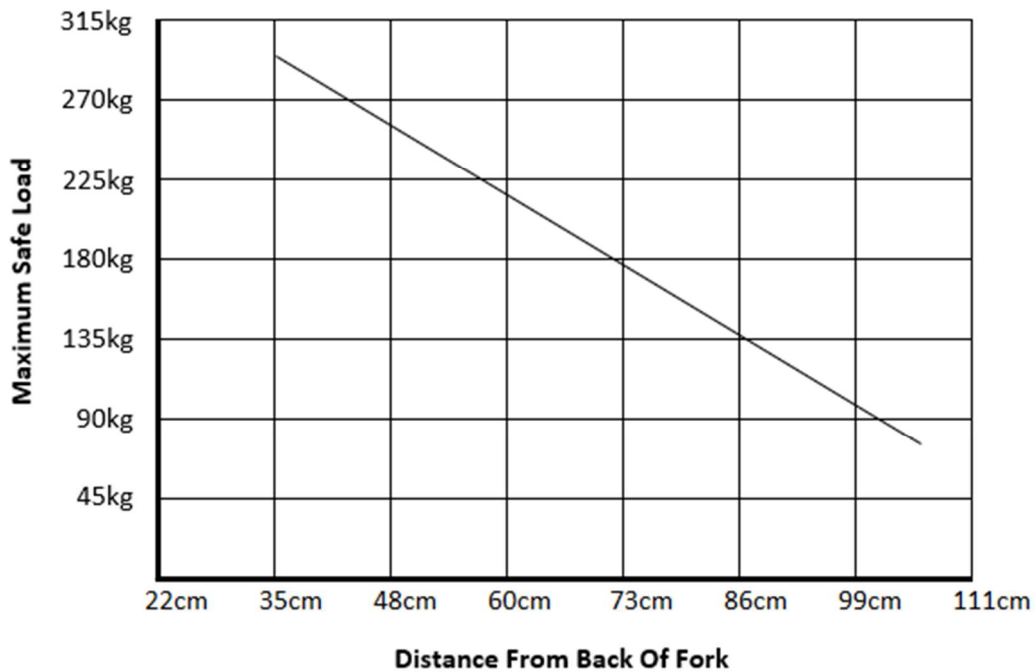

**WARNING**

The center of gravity of the load should always be centered between the fork arms and as far back towards the lift as possible.



**WARNING**

The center of gravity of the load should never extend past 55cm on standard forks.