

**Australian Pump Industries: Class A  
3000 PSI Petrol Water Pressure Cleaner  
Model: ABBSC350/GX390**

Supplied by Centenary Hire. Ph: (07) 3715 9700

**INSTRUCTIONS FOR USE: Please read carefully  
before putting machine into operation!**

**GENERAL SAFETY PRECAUTIONS**



Personal protective equipment (PPE) must be worn at all times.

The operator and all people working in close vicinity of the water pressure cleaner, should wear hearing protection such as ear muffs/buds.

Wear appropriate safety footwear with a strong upper material which will protect against accidental passage of high pressure water over the operator's foot. Wear footwear with a non-skid sole to prevent slippage on wet surfaces.

Place warning signage in position appropriate to the need, including barricading the work area from public as required.



**DO NOT spray or aim the lance directly at or in the direction of a person, animal or electrical equipment as SERIOUS INJURY or DEATH may result. SEEK MEDICAL ADVICE IF SKIN IS BROKEN.**



**FIRE and EXPLOSION risk due to petrol fuel vapours or when refuelling.**

Motor **MUST** be stopped and ignition switch turned off before refuelling machine. Allow motor to cool before refuelling.

Keep away from ignition sources and combustible materials. Do not smoke or operate near sources of heat or fire. Only use petrol containers fit for the purpose.

When refuelling the machine, avoid breathing petrol fumes. Work upwind where possible.

**OPERATING INSTRUCTIONS**

**PERFORM DAILY CHECKS FIRST:**

Check oil levels in pump and motor prior to starting machine.

Check high pressure hose/s for damage ie: splits, cracks.

Run water through water supply hose before connecting to machine to clear out any debris.

Fill fuel tank with unleaded petrol observing previously stated safety precautions.

**TO START MACHINE**

1. Connect high pressure hose to machine.
2. Connect high pressure hose to lance.
3. Connect water supply and turn water supply on.
4. Turn motor ignition switch on.
5. Turn fuel tap on.
6. For cold motor starts, turn choke on.
7. Set the motor throttle to approx 1/3 of maximum.
8. Depress the trigger on the lance to establish a low pressure water flow out the end of the lance.
9. Pull recoil starter quickly and forcibly to start motor.
10. When motor starts, release lance trigger and push choke lever to the off position.

**ADJUSTING THE PRESSURE**

Twist the side grip handle of the lance towards you (clockwise) to close the valve for **high pressure**.

**--- OVERTIGHTENING WILL CRACK THE VALVE ---**

Adjust the **motor throttle** to achieve the required high pressure output.

Twist the side grip handle of the lance away from you (anti-clockwise) to open the valve for **low pressure**.



**NEVER START OR RUN THE MACHINE WITHOUT A WATER SUPPLY**



**TEST AT LOW PRESSURE FIRST TO PREVENT SURFACE DAMAGE.**



**NEVER STOP ENGINE SUDDENLY WHILE RUNNING AT HIGH SPEED.**

**TO STOP MACHINE**

1. Reduce motor speed to low using the throttle.
2. Turn fuel tap off.
3. Turn motor ignition switch off.
4. Once motor stops running, turn off water supply.
5. Depress the trigger on the lance to relieve back pressure.
6. Disconnect water supply hose, high pressure hose and lance.

**DURING USE**



**DO NOT lock / secure the lance trigger in the 'ON' position.**



**DO NOT spray or aim the lance directly at or in the direction of a person, animal or electrical equipment as SERIOUS INJURY or DEATH may result.**



**ALWAYS point the lance at the surface that is intended to be cleaned.**



**DO NOT leave machine running while unattended.**

**Australian Pump Industries: Class A  
3000 PSI Petrol Water Pressure Cleaner  
Model: ABBSC350/GX390**

Supplied by Centenary Hire. Ph: (07) 3715 9700

**INSTRUCTIONS FOR USE: Please read carefully  
before putting machine into operation!**

**GENERAL SAFETY PRECAUTIONS**



Personal protective equipment (PPE) must be worn at all times.

The operator and all people working in close vicinity of the water pressure cleaner, should wear hearing protection such as ear muffs/buds.

Wear appropriate safety footwear with a strong upper material which will protect against accidental passage of high pressure water over the operator's foot. Wear footwear with a non-skid sole to prevent slippage on wet surfaces.

Place warning signage in position appropriate to the need, including barricading the work area from public as required.



**DO NOT spray or aim the lance directly at or in the direction of a person, animal or electrical equipment as SERIOUS INJURY or DEATH may result. SEEK MEDICAL ADVICE IF SKIN IS BROKEN.**



**FIRE and EXPLOSION risk due to petrol fuel vapours or when refuelling.**

Motor **MUST** be stopped and ignition switch turned off before refuelling machine. Allow motor to cool before refuelling.

Keep away from ignition sources and combustible materials. Do not smoke or operate near sources of heat or fire. Only use petrol containers fit for the purpose.

When refuelling the machine, avoid breathing petrol fumes. Work upwind where possible.

**OPERATING INSTRUCTIONS**

**PERFORM DAILY CHECKS FIRST:**

Check oil levels in pump and motor prior to starting machine.

Check high pressure hose/s for damage ie: splits, cracks.

Run water through water supply hose before connecting to machine to clear out any debris.

Fill fuel tank with unleaded petrol observing previously stated safety precautions.

**TO START MACHINE**

1. Connect high pressure hose to machine.
2. Connect high pressure hose to lance.
3. Connect water supply and turn water supply on.
4. Turn motor ignition switch on.
5. Turn fuel tap on.
6. For cold motor starts, turn choke on.
7. Set the motor throttle to approx 1/3 of maximum.
8. Depress the trigger on the lance to establish a low pressure water flow out the end of the lance.
9. Pull recoil starter quickly and forcibly to start motor.
10. When motor starts, release lance trigger and push choke lever to the off position.

**ADJUSTING THE PRESSURE**

Twist the side grip handle of the lance towards you (clockwise) to close the valve for **high pressure**.

**--- OVERTIGHTENING WILL CRACK THE VALVE ---**

Adjust the **motor throttle** to achieve the required high pressure output.

Twist the side grip handle of the lance away from you (anti-clockwise) to open the valve for **low pressure**.



**NEVER START OR RUN THE MACHINE WITHOUT A WATER SUPPLY**



**TEST AT LOW PRESSURE FIRST TO PREVENT SURFACE DAMAGE.**



**NEVER STOP ENGINE SUDDENLY WHILE RUNNING AT HIGH SPEED.**

**TO STOP MACHINE**

1. Reduce motor speed to low using the throttle.
2. Turn fuel tap off.
3. Turn motor ignition switch off.
4. Once motor stops running, turn off water supply.
5. Depress the trigger on the lance to relieve back pressure.
6. Disconnect water supply hose, high pressure hose and lance.

**DURING USE**



**DO NOT lock / secure the lance trigger in the 'ON' position.**



**DO NOT spray or aim the lance directly at or in the direction of a person, animal or electrical equipment as SERIOUS INJURY or DEATH may result.**



**ALWAYS point the lance at the surface that is intended to be cleaned.**



**DO NOT leave machine running while unattended.**